



**SKMEI**  
**DIGITAL WATCH**  
**0817**



## Operating instructions

In normal mode model

Display: Week- Hours -Minutes - Seconds


Press S1 show Month and Date

Press S2 button to show Alarm Hours and Minutes

Modes Covert : Press S3

Backlight: Press S4 (seven kinds color backlight)

12/24H format

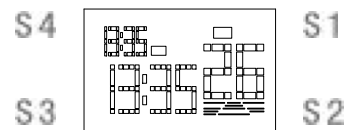


## Modes of watch

In normal display mode: Press S3 → chronograph mode → alarm setting mode → time setting mode



## Chronograph function

In normal display mode: Tap S3 once → enter chronograph mode → tap S1 to start → tap S1 to stop

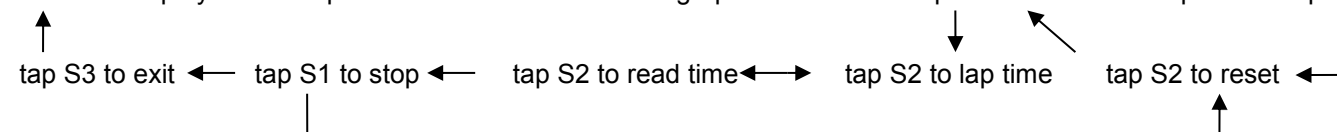

## Chime of every hour ON/OFF

In normal mode hold S2 and then tap S3, if all icon of week ON means Chime ON, otherwise means OFF.

## Alarm ON/OFF

In normal time Mode, hold S1 and S2 to ON/ OFF Alarm

## Alarm Setting

In normal time Mode, tap S3 twice enter into Alarm setting mode, and the Hours flashing

Tap S1 to adjust correct hour of your alarm. Pay attention to AM/PM

Tap S2 the Minutes will flash. Tap S1 to adjust correct minute of your alarm

Tap S3 to save / exit.

## Time&Date setting

In normal time Mode, tap S3 three times to enter Time&Date setting mode and Seconds flashing.

Tap S2 and the Minutes will flash, tap S1 to adjust correct minutes (Pay attention to AM/PM, "H" is 24 hour format)

Tap S2 and the Hours will flash. Tap S1 to reach the correct hours

Tap S2 and the Date will flash. Tap S1 to adjust the correct date

Tap S2 and the Month will flash. Tap S1 to adjust the correct month

Tap S2 and the Week will flash. Tap S1 to adjust the correct week (MO=Monday, TU=Tuesday ...)

Tap S3 to save / exit.

## Backlight setting

Hold S4 will show all kinds of colors backlight from



Just stop hold the button, last color of will be memorized to set as current back light color