



SKMEI
DIGITAL WATCH
1392



1392 Digits Watch Instruction


A. Features

- ★ 10 Digits LCD Display, Display Hour ,Minute ,Second ,Date and Week
- ★ Chime hourly and Daily Alarm
- ★ 12 / 24H format selectable, Auto Calendar
- ★ 1/100 second Chronograph with split functions
- ★ EL backlight

(A)Light/Reset


(B)Mode

(C)Reset

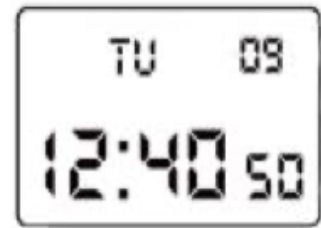

B. Operational Manual

- ★ At any state ,press A key EL backlight for 3s .
- ★ In normal display Mode, Press A key to convert 12/24H
- ★ Press B key to convert mode:

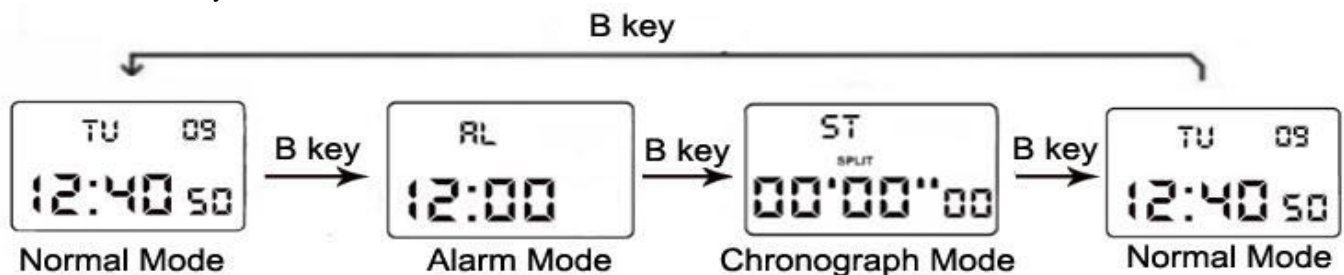

Alarm Setting

- ★ in normal display Mode, press B key once enter into Alarm Mode
- ★ Press C key the “Hour” will flash, press A key to adjust the “Hour”
- ★ Press C key the “Minute” will flash, press A key to adjust the “Minute”
- ★ Press B key to exit.


Alarm & Chime ON/OFF

- ★ In normal mode press B key once enter into alarm mode , press A key to ON/OFF the Alarm&Chime function, Press B key to exit.
- ★ If just appear the icon “AL/ /ALM” means Alarm function ON, if just appear the “ CH/ /CHI” means Chime function ON, if the two icons all appear mean two function ON, other wise means OFF

Chronograph functions

In normal display mode: press B key twice , enter Chronograph mode

- ★ Press A key to start, press A again to suspend, press A again to continue,press A to suspend again,.....when suspend,press C key back to 0:00:00.
- ★ In Chronograph mode, press A key to start, press A key enter into split function.press A key again to get the first group record ,but the second group still processing in the back ground,press A key again to continue the second group,press A key again to read the second group record.....when the final group finished, Press A key to stop the SPL function,press A key read the final group(SUM) record, press C key again to clear the record to zero.

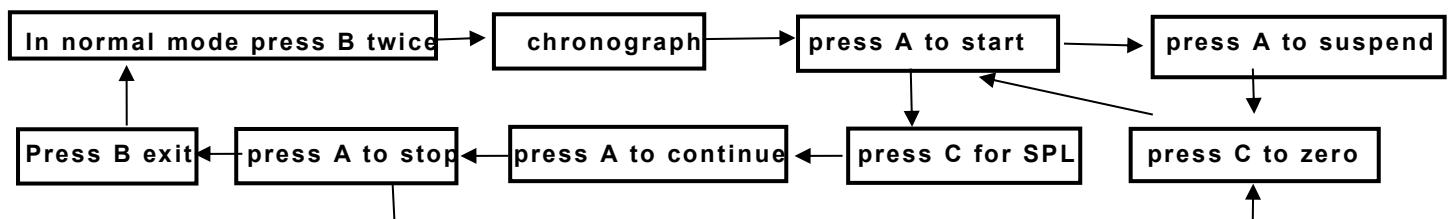

Time & Date Setting

In normal Mode, press B key three times to enter setting mode and the seconds will flashing. Press A key to zero.

- ★ Press C key the “Hour” will flash. Press A key to adjust the “Hour”.
- ★ Press C key the “Minute” will flash. Press A key to adjust the “Minute”.
- ★ Press C key the “Month” will flash. Press A key to adjust the “Month”.
- ★ Press C key the “Date” will flash. Press A key to adjust the “Date”.
- ★ Press C key the “Week” will flash. Press A key to adjust the “Week”.Press B key to exit.