



SKMEI
DIGITAL WATCH
1649



12个电子手表通用说明书




A. 功能简介:

- ◆ 12位计功能, 显示时、分、秒、月、日、星期。
- ◆ 12/24时制选择, 全自动日历
- ◆ EL 背光
- ◆ 响闹及整点报时
- ◆ 1/100秒秒表及分段计时


B. 产品功能模式:

- ◆ 按B键转换模式顺序:

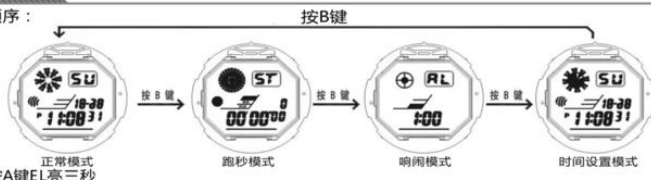

1. 任何模式下, 按A键EL亮三秒

跑秒模式:



响闹模式:

- ◆ 在正常显示模式下按B两次进入响闹时间设置模式。
- ◆ 按C响闹小时设置且小时将会闪动。
- ◆ 按D改变响闹小时。
- ◆ 再次按C进入响闹分钟设置且分钟将会闪动。
- ◆ 按D改变响闹分钟。
- ◆ 按B退出响闹时间设置模式返回正常显示模式。

时间与日历模式:

- ◆ 在正常显示模式下按B三次进入时间与日历设置模式并且秒钟将闪动, 按D归零;
- ◆ 按C进入小时设置且小时将会闪动。
- ◆ 按D改变小时。(此时循环按D键可更换12/24小时制, 12小时制显示字符A/P 分别代表上午和下午. 24小时制会单独显示H代表小时)。
- ◆ 再次按C进入分钟设置且分钟将会闪动。
- ◆ 按D改变分钟。
- ◆ 按C第三次将进入月份设置且月份将会闪动。
- ◆ 按D改变月份。
- ◆ 按C第四次将进入日期设置且日期将会闪动。
- ◆ 按D改变日期。
- ◆ 按C第五次将进入星期设置且星期将会闪动。
- ◆ 按D改变星期。
- ◆ 按B退出时间与日历设置模式并且返回正常显示模式。

响闹与整点开关设置:

- ◆ 在正常显示模式下按B两次进入响闹模式, 按D进行响闹/整点报时转换及开/关设置. 只出现 "AL" 或者 "SIG" 图标, 则表示响闹为开; 只出现 "SIG" 或者 "!" 图标, 则表示整点报时为开; 图标都显示, 则表示响闹与整点报时都为开; 图标都不出现则都为关。

注意事项: 在游泳或洗车时, 可以使用本表, 但不能在水中操作按钮。

OPERATION INSTRUCTION




A. Features:


- ◆ 12 Digits LCD Display , Display Hour ,Minute ,Second ,Month ,Day and Week
- ◆ Daily Alarm and Chime hourly
- ◆ 12 / 24H format selectable , Auto Calendar
- ◆ 1/100 second Chronograph with split functions
- ◆ EL backlight

B. Operational Manual:

- ◆ At any mode , press A key , the EL back light on for 3 seconds.
- ◆ Press B key to convert MODE:

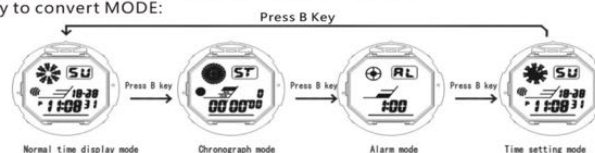

Chronograph functions:



Alarm & Chime ON/OFF:

- ◆ In normal mode , press B key twice to enter to Alarm Mode, Then press D to ON/OFF "ALARM" /" CHIME" function.
- ◆ If ALARM"/" CHIME" symbol appears , means ALARM"/" CHIME" function ON , otherwise means OFF

Alarm setting:

- ◆ in normal mode, press B twice to enter Alarm mode and press C then "Hours" flashing
- ◆ Press D to adjust "Hour" for your Alarm. Pay attention to AM/PM , 12H Display A/P means AM /PM . 24H display "H" only means Hour
- ◆ Press C then "Minutes" flashing, Press D to adjust "Minutes" for your alarm . Press B key to exit.

Time & date setting:

- ◆ In Normal Mode, press B three times enter into setting mode and the "Seconds" flashing, Press D to zero.
- ◆ Press C the "Hours" will flash. Press D to adjust "Hours" Once Hours reach 12/24 Digit it will automatically convert 12/24H mode.
- ◆ Press C the "Minutes" will flash. Press D to adjust "Minutes" .
- ◆ Press C the "Month" will flash. Press D to adjust "Month"
- ◆ Press C the "Date" will flash. Press D to adjust "date"
- ◆ Press C the "Week" will flash. Press D to adjust "Week"
- ◆ Press B key to exit.

Attention: You can wear the watch when swimming or washing car. But not allow to operate it