



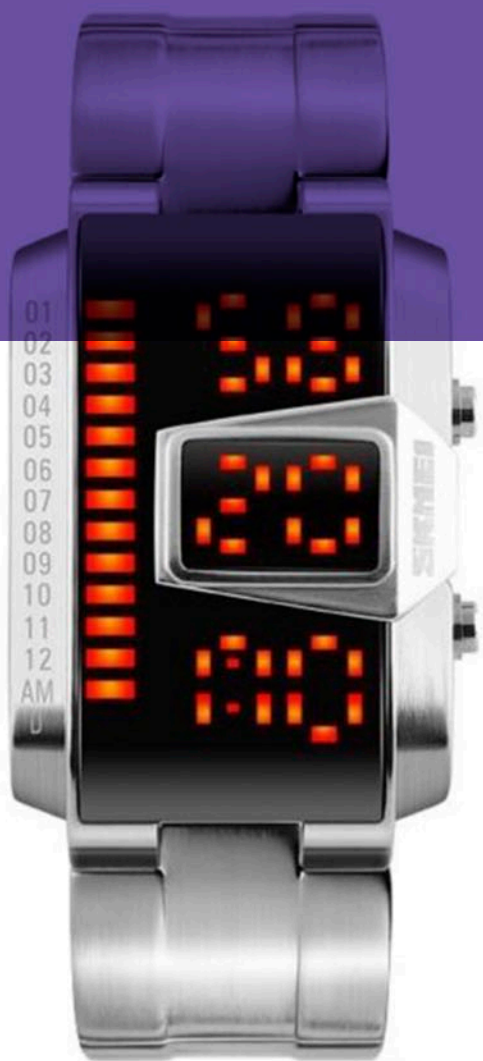

SKMEI
LED WATCH
1179



时刻美 1179 手表操作使用说明书

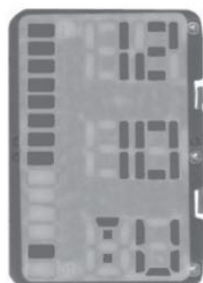


—— MODE键

—— SET键

功能概述：

- ◆ 2个模式；时间模式，日期模式，开机动画功能。
- ◆ 12小时制显示，时分秒及星期显示，日月年显示。

部位说明：

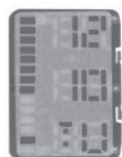


当前时间：上午8：12分10秒星期二




当前日期：15年2月22日

- ◆ 按MODE键可选择各功能画面。

时间模式



日期模式



关机




时间及日期的设定：

- ◆ 在时间模式显示时，此表示现可进入设定画面。
- ◆ 按SET键小时数位闪动，此表示现已进入设定画面。
- ◆ 按MODE键增加设定小时数值，长按制不放则自动增加数值，AM灯点亮代表上午时间；
- ◆ 按SET键分钟数位闪动。
- ◆ 按MODE键增加分钟数值；
- ◆ 按SET键年数位闪动。
- ◆ 按MODE键增加年数值；
- ◆ 按SET键月数位闪动。
- ◆ 按MODE键增加月数值；
- ◆ 按SET键日数位闪动。
- ◆ 按MODE键增加日数值，
- ◆ 按SET键设定回到正常计时状态，设定完成，5秒后自动关机。

特别注意：在游泳或洗车时，可以使用本表，但不能在水中操作按钮。

User Manual of SKMEI Model #1179

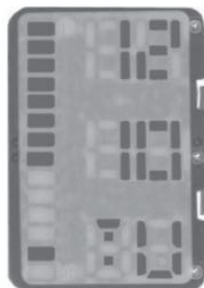


—— MODE

—— SET

Feature :

- ◆ Two models: Time Model, Date Model.
- ◆ 12H format, show hours, minutes, seconds and week, show date.

Display Image :

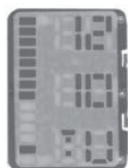

Time display: 8:12'10" AM Tuesday




Date display: 22th, Feb. 2015


Mode Convert :

- ◆ Press the MODE key convert the MODE as following:

Time Model

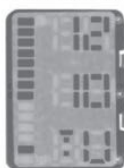

Date Model

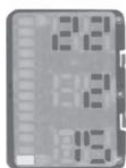

Turn off



Time&Date Setting:

- ◆ In saving mode, press MODE key into setting Mode.
- ◆ Press SET once, "HOUR" flashing, press MODE to advance
- ◆ Press SET once, "MIN" flashing, press MODE to advance
- ◆ Press SET once, "YEAR" flashing, press MODE to advance
- ◆ Press SET once, "MONTH" flashing, press MODE to advance
- ◆ Press SET once, "DAY" flashing, press MODE to advance
- ◆ Press SET to exist and save, turn off after 5 seconds.